

PREVENT WHITE LINES

Our printers are very precise. Artwork needs to be extended exactly to or past the artboard bounds in order to prevent a line on your finished pouch.

WHY DOES A WHITE LINE APPEAR?

Lines on the edge of pouches are caused by artwork not touching the edge of the artboard. This issue can be difficult to see until pouches are printed, so it's important to correct the problem in the file before placing your order.





HOW THIS AFFECTS THE FINISHED PRODUCT

If the artwork is not pulled all the way to the edge of the artboard, a gap will appear on your final printed pouches. The line on your pouches is created by the material substrate showing through. It will look like a white line, silver line or clear line (depending on the material chosen) on the edge of each pouch.

HOW TO PREVENT


To prevent a white line from appearing, pull graphics over the edge of the artboard. Artwork hanging over the edge of the artboard will not cause any issues with printing. There is no need to clip graphics to the artboard bounds.

This black line marks the edge of your artboard!

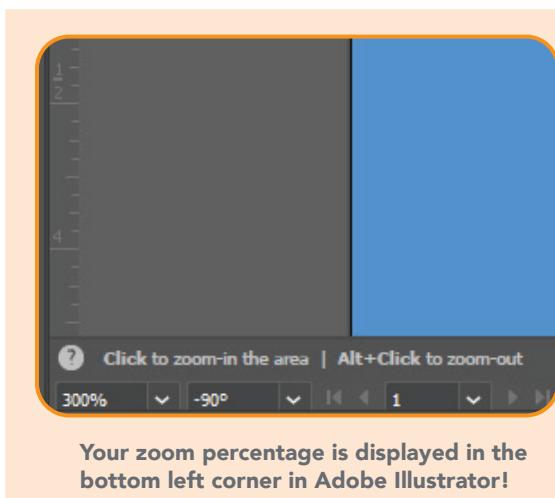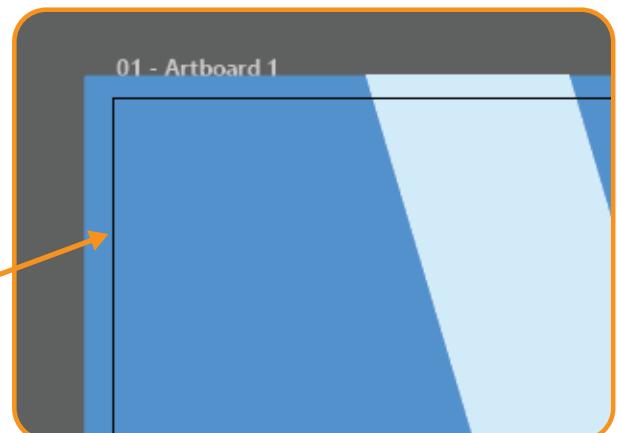

ZOOM IN

At even up to 500%, you might not notice a gap in your file between the artwork and the artboard edge. When zoomed into 1000%+, it will be easier to notice a gap on the edge of artwork. Sometimes, you'll have to zoom all the way in to 6000% or more to see the gap.

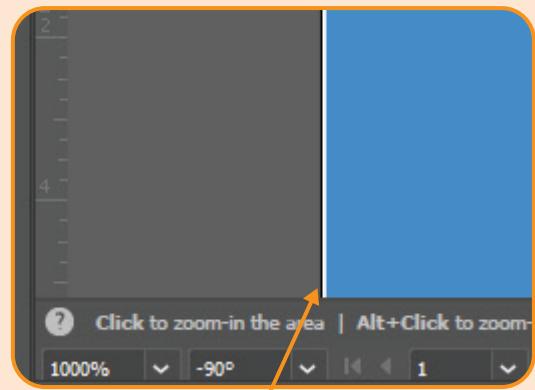

DO YOU NEED HELP FORMATTING YOUR ARTWORK?

We offer file formatting services. For more information email graphics@thepkglab.com.